




Insert BiodigitalPC® Into GAZOO

TOP



1 Open the MOLLE clips to access the screw with D-ring.

BOTTOM

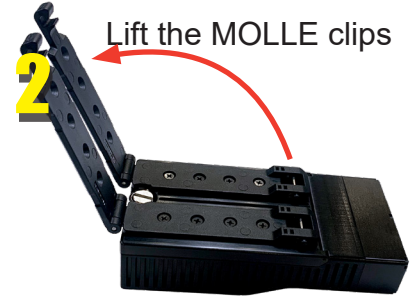

2 Lift the MOLLE clips




3 On the bottom side turn the screw with D-ring counterclockwise to unlock the door.



4 Once the door is unlocked, lift it up to expose the BiodigitalPC® dock.



5 Place the BiodigitalPC® with the "BOTTOM SIDE" sticker facing up at at ~30° angle and then push the card in to engage the GAZOO connector.

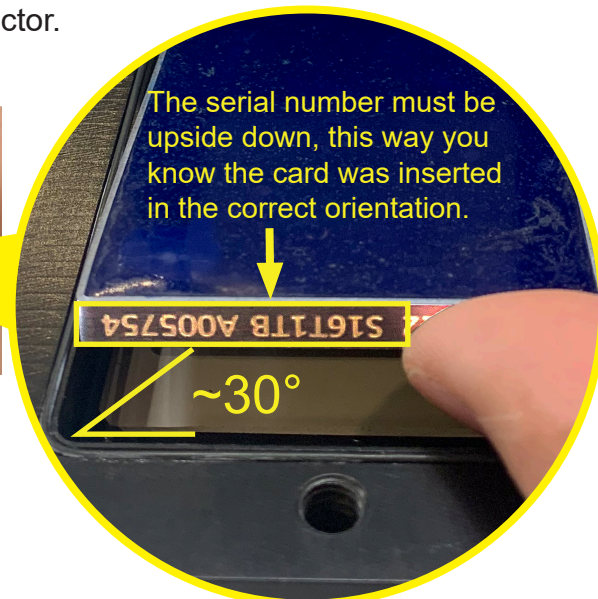

The serial number must be upside down, this way you know the card was inserted in the correct orientation.

~30°



6 Once the BiodigitalPC® is fully docked, close the door and lock it by turning the screw with D-ring clockwise.



Remove BiodigitalPC® From GAZOO

TOP



BOTTOM

screw
with
D-ring



1



On the bottom side turn the screw with D-ring counterclockwise to unlock the door.

2



Once the door is unlocked, lift it up to expose the BiodigitalPC® dock.

3




Lift up the BiodigitalPC® with your finger.

4



Pull out the BiodigitalPC® as seen here.

5

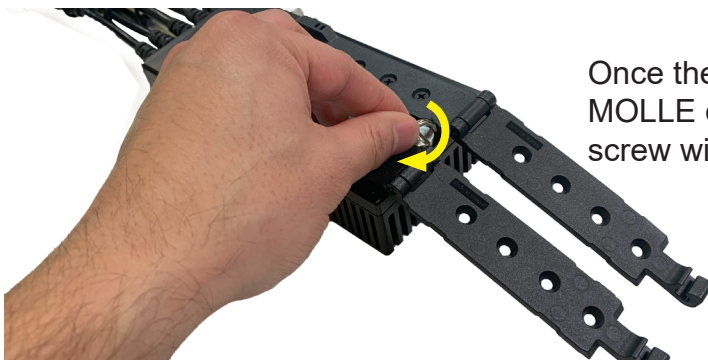

Once the BiodigitalPC® is removed, before locking the MOLLE clips close the door and lock it by turning the screw with D-ring clockwise.